USER GUIDE FOR AADHAAR PRINTER DRIVER SETTINGS (Datacard SD-360)

Latest Printer Driver Download Link: <u>https://www.datacard.com/id-card-printer-support-and-drivers/sd360-id-card-printer#drivers-and-downloads</u>

Old Driver Download Link: http://www.spectrobiz.com/DataCard/Datacard SD360 Driver.zip

STEP 1: Go to "**Start**" Menu → "**Devices and Printers**".



STEP 2: Switch ON the printer \rightarrow Find the active instance of "**XPS Card Printer**" \rightarrow Right Click \rightarrow Click on "**Printing Preferences**".

Printers and Faxes (5)



Fax



HP LaserJet M1005 on HCLLAPTOP2-PC

Microsoft XPS Document Writer



Send To OneNote 2007



See what's printing Set as default printer Printing preferences Printer properties Create shortcut Troubleshoot Remove device Properties

STEP 3: In the "**Layout**" tab, select the following settings (as shown in the picture below):

- Orientation: Landscape
- Print on Both Sides: Flip on Short Edge
- Click on "Advanced" button.

R APS Card Printer Printing Preferences	
Layout Print Area Color Adjustment Print	Mode About
Orientation: Landscape Print on Both Sides: Flip on Short Edge	Side 1 Side 2
	Advanced
	OK Cancel Apply

~

STEP 4: In the **"XPS Card Printer Advanced Options**" window, select the following settings (as shown in the picture below):

- Print bar codes using monochrome: <u>On</u>
- Print black image pixels using monochrome: <u>Off</u>
- Rotate front side card image 180 degrees: <u>Off</u>
- Rotate back side card image 180 degrees: <u>Off</u>
- Split ribbon: <u>No</u>
- Click on **"OK"** button.

Registration Card Printer Printing Preferences
Layout Print Area Color Adjustment Print Mode About
XPS Card Printer Advanced Options
Image: State Stat
OK Cancel
OK Cancel Apply

STEP 5: Go to "Print Area" tab → Select "Print and topcoat entire side of card" for both Front Side Print Area & Back Side Print Area.

 Print and topcoat entire side of card. Block printing and topcoat over this area: 	Print Blocking
Ignore topcoat selection. Use my bitmap for topcoat.	Topcoat Blocking
Back Side Print Area Print and topcoat entire side of card. Block printing and topcoat over this area:	Print Blocking
Ignore topcoat selection. Use my bitmap for topcoat.	Topcoat Blocking

STEP 6: Go to **"Color Adjustment"** tab \rightarrow If required, you can adjust the **Brightness, Contrast, Red Green & Blue** values based on the card output you want to get.



STEP 7: Go to **"Print Mode"** tab \rightarrow Select **"Always use standard resolution (300x300 dpi)"** under **"Print Resolution"** \rightarrow Click on **"Apply"** button \rightarrow OK \rightarrow Done.

APS Card Printer Printing Preferences	×
Layout Print Area Color Adjustment Print Mode About	
Print Resolution	
Always use standard resolution (300x300 dpi)	
Always use best possible resolution	
Custom	
Rewrite	
Print using rewritable cards	
OK Cancel Apply	

- Now your Datacard SD-360 Card Printer is ready for printing Double-Sided Aadhaar Cards.
- You can repeat the above steps for every instance of XPS Card Printer which is created when you connect the Printer USB cable to a different USB Port.
- This guide has been prepared for use of Datacard SD-360 Card Printer (Double-Sided) with the YMCKT-KT Color Ribbons.

* This User Guide is brought to you by: SpectroBiz Softech Pvt. Ltd.

Regd. Office: At - Ratanpur, P.O. Krupasindhupur, Dist - Ganjam, Berhampur - 761001, ODISHA. E-mail: <u>info@spectrobiz.com</u> Mob: +91 93794 27535 / 70777 04108

